31/08/2001

INSTRUMENT CLUSTER ASSY

- MULTIPLEXING ASSEMBLY
- TO O 07846

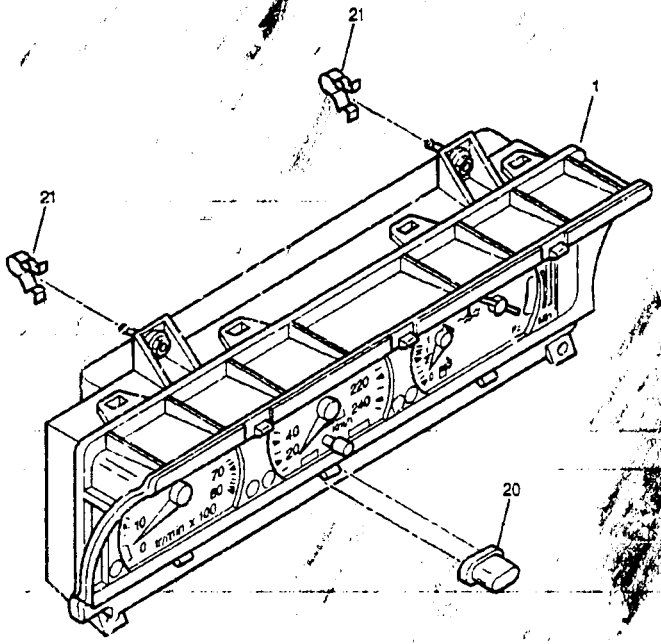

			INSTRUM CLUSTER
1	6101 G0	01	TO O 07482
	6101 Z6	01	FROM O 07483
20	95 439 232	C.	FIXING STOP
21	98 171 714	02	CLIP H 17 L18X6

05/2000 M5209300

M5209300

31/08/2001

INSTRUMENT CLUSTER ASSY

- MULTIPLEXING ASSEMBLY
- TO O 07846

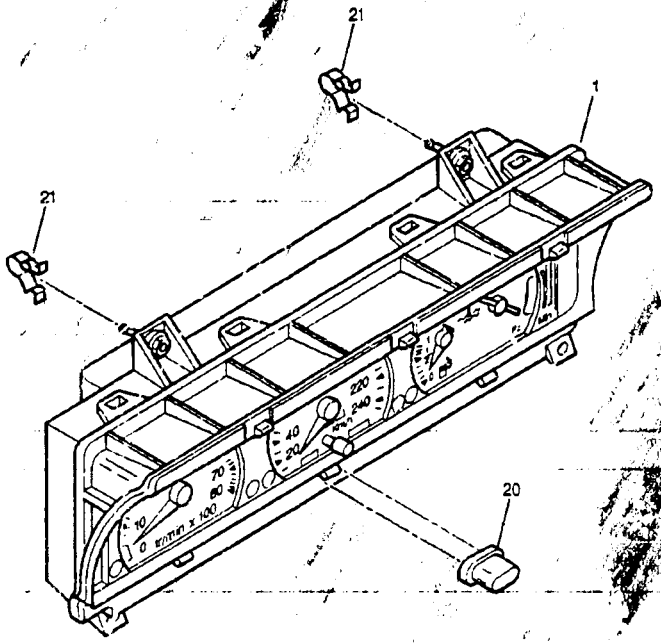

			INSTRUM CLUSTER
1	6101 G0	01	TO O 07482
	6101 Z6	01	FROM O 07483
20	95 439 232	C.	FIXING STOP
21	98 171 714	02	CLIP H 17 L18X6

05/2000 M5209300

M5209300

31/08/2001

INSTRUMENT CLUSTER ASSY

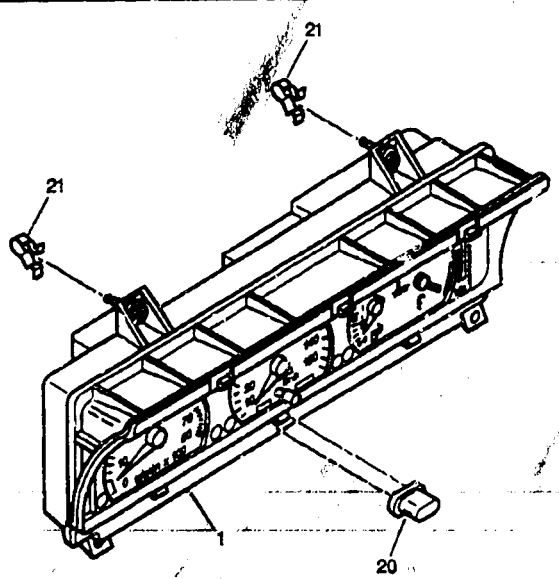

M5209280

- FROM O 07329
- WITHOUT MULTIPLEXING, RANGE INFO INDICATOR, RIGHT HAND DRIVE

			INSTRUM CLUSTER
1	**6101 S2**	01	-PETROL, BVM, STD OIL LEVEL INDICATOR
	6101 S3	01	-PETROL, BVA 4HP18, GRADUATION MPH, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z5	01	-INJECTION ES9J4, HP20 (AG), GRADUATION MPH, OIL TEMP + LEVEL INDICATOR
	6101 S1	01	-PETROL, BVA 4HP18, GRADUATION KMS/H, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z4	01	-INJECTION ES9J4, HP20 (AG), GRADUATION KMS/H, OIL TEMP + LEVEL INDICATOR
	6101 T4	01	-DIESEL FUEL, BVM
	6101 T5	01	-DIESEL FUEL, BVA
20	**95 499 232**	08	**FIXING STOP**
21	**96 171 714**	02	**CLIP H 17 L19X6**

31/08/2001

INSTRUMENT CLUSTER ASSY

- FROM O 07329
- WITHOUT MULTIPLEXING, NEEDLE TYPE FUEL GAUGE, RIGHT HAND DRIVE

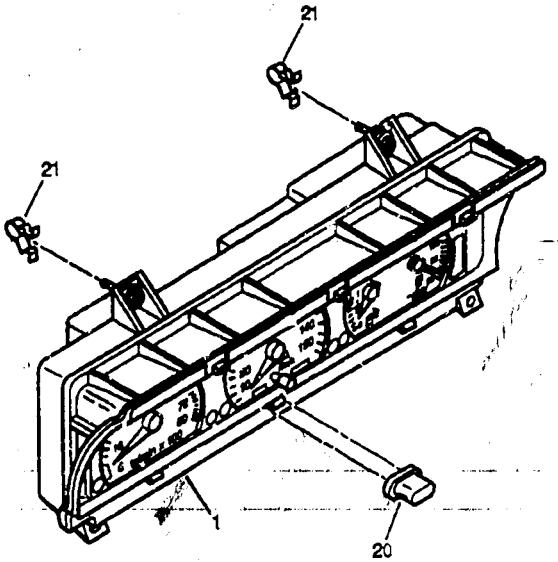

09/96 M5206230

M5209230

			INSTRUM CLUSTER
1	**6101 S6**	01	-PETROL, BVM, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 S7	01	-PETROL, BVA, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 R6	01	-PETROL, BVM, REV COUNTER CALC, STD OIL LEVEL INDICATOR
	6101 R7	01	-PETROL, BVA, STD OIL LEVEL INDICATOR, REV COUNTER CALC, GRADUATION MPH
	6101 R5	01	-PETROL, GRADUATION KMS/H EXCEPT INJECTION ES9J4
	6101 Z2	01	-INJECTION ES9J4, GRADUATION KMS/H
	6101 T0	01	-DIESEL FUEL, BVM, REV COUNTER CALC, STD OIL LEVEL INDICATOR
	6101 T1	01	-DIESEL FUEL, BVA, REV COUNTER CALC, STD OIL LEVEL INDICATOR
	6101 T7	01	-DIESEL FUEL, BVM, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 T9	01	-DIESEL FUEL, BVA, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
20	**95 499 232**	06	**FIXING STOP**
21	**96 171 714**	02	**CLIP** H 17 L18X6

31/08/2001

INSTRUMENT CLUSTER ASSY

- FROM O 07329
- WITHOUT MULTIPLEXING, RANGE INFO INDICATOR, LEFT HAND DRIVE

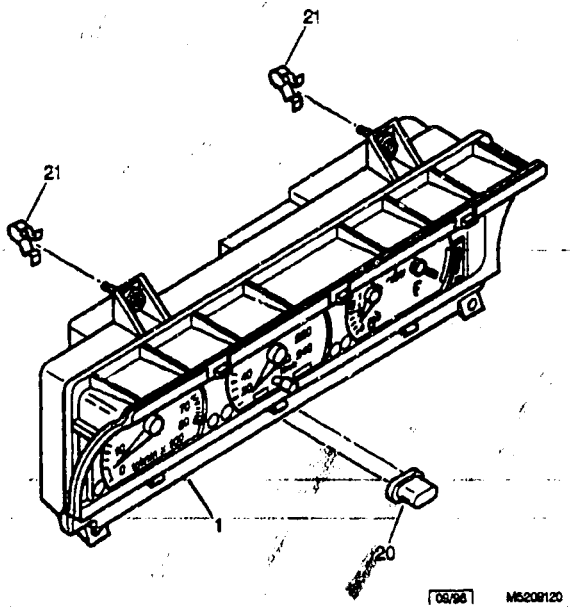

M5209120

			INSTRUM CLUSTER
1	6101 S0	01	-PETROL, BVM, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z3	01	-INJECTION ES9J4, BVM, OIL TEMP + LEVEL INDICATOR
	6101 S1	01	-PETROL, B'/A 4HP18, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z4	01	-INJECTION ES9J4, HP20 (AG), OIL TEMP + LEVEL INDICATOR
	6101 R6	01	-PETROL, BVM, WITHOUT OIL LEVEL GAUGE
	6101 R9	01	-PETROL, BVA, WITHOUT OIL LEVEL GAUGE
	6101 T2	01	-DIESEL FUEL, BVM
	6101 T3	01	-DIESEL FUEL, BVA
20	95 499 232	06	FIXING STOP
21	96 171 714	02	CLIP H 17 L19X8

31/08/2001

INSTRUMENT CLUSTER ASSY

- FROM O 07329
- WITHOUT MULTIPLEXING, NEEDLE TYPE FUEL GAUGE, LEFT HAND DRIVE

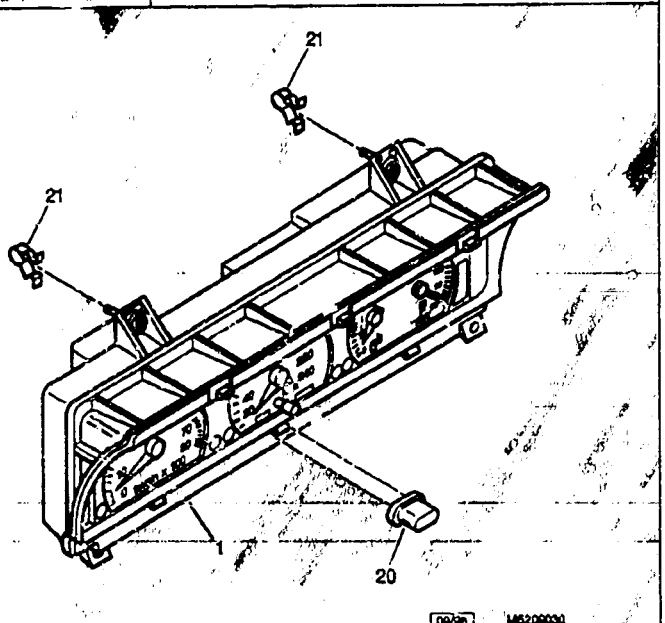

M5209030

				INSTRUM CLUSTER
1	6101 S4	01		-PETROL, BVM REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 S5	01		-PETROL, BVA, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 R4	01		-PETROL, BVM, REV COUNTER CALC, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z1	01		-INJECTION ES9J4 BVM, REV COUNTER CALC, OIL TEMP + LEVEL INDICATOR
	6101 R5	01		-PETROL, BVA 4HP18, REV COUNTER CALC, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z2	01		-INJECTION ES9J4, HP20 (AG), REV COUNTER CALC, OIL TEMP + LEVEL INDICATOR
	6101 T6	01		-DIESEL FUEL, BVM, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 T8	01		-DIESEL FUEL, BVA, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 S8	01		-DIESEL FUEL, BVM, REV COUNTER CALC, STD OIL LEVEL INDICATOR
	6101 S9	01		-DIESEL FUEL, BVA, REV COUNTER CALC, STD OIL LEVEL INDICATOR
20	9[illegible] 199 232	08		**FIXING STOP**
21	98 71 714	02		**CLIP** H 17 L19X6

31/08/2001

INSTRUMENT CLUSTER ASSY

- WITHOUT MULTIPLEXING
- TO O 07328

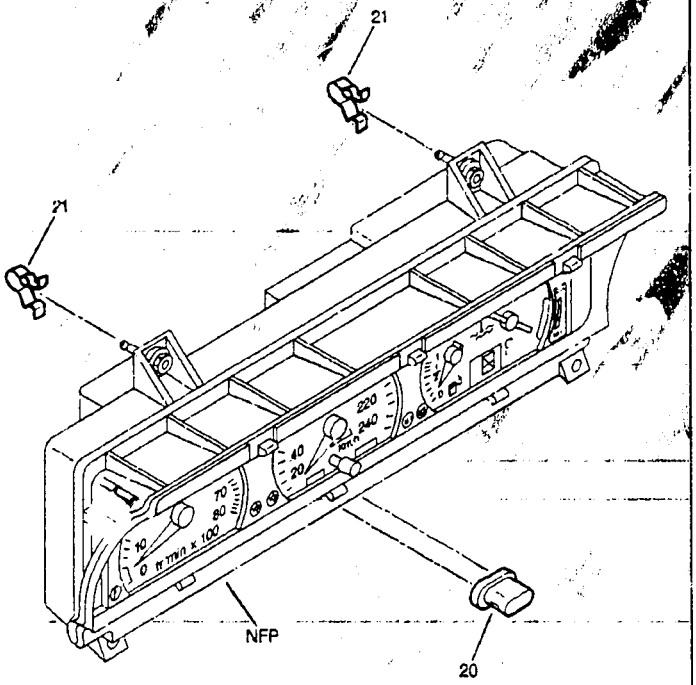

07/1999 M5209010

M5209010

20		95 499 232	06	FIXING STOP
21		96 171 714	02	CLIP H 17 L19X8

31/08/2001

INSTRUMENT CLUSTER ASSY

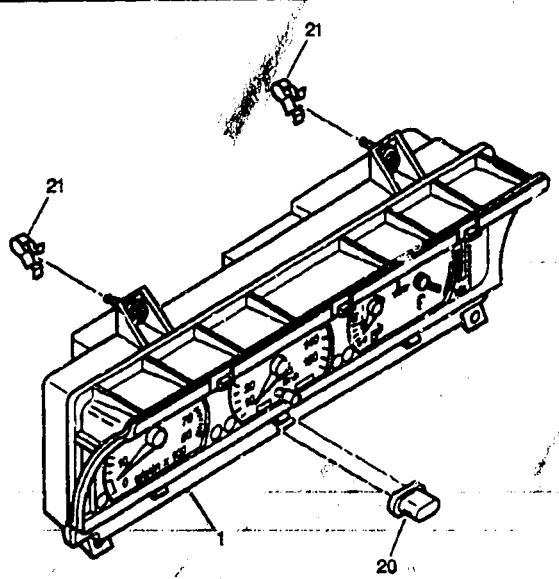

M5209280

- FROM O 07329
- WITHOUT MULTIPLEXING, RANGE INFO INDICATOR, RIGHT HAND DRIVE

			INSTRUM CLUSTER
1	**6101 S2**	01	-PETROL, BVM, STD OIL LEVEL INDICATOR
	6101 S3	01	-PETROL, BVA 4HP18, GRADUATION MPH, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z5	01	-INJECTION ES9J4, HP20 (AG), GRADUATION MPH, OIL TEMP + LEVEL INDICATOR
	6101 S1	01	-PETROL, BVA 4HP18, GRADUATION KMS/H, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z4	01	-INJECTION ES9J4, HP20 (AG), GRADUATION KMS/H, OIL TEMP + LEVEL INDICATOR
	6101 T4	01	-DIESEL FUEL, BVM
	6101 T5	01	-DIESEL FUEL, BVA
20	**95 499 232**	08	**FIXING STOP**
21	**96 171 714**	02	**CLIP H 17 L19X6**

31/08/2001

INSTRUMENT CLUSTER ASSY

- FROM O 07329
- WITHOUT MULTIPLEXING, NEEDLE TYPE FUEL GAUGE, RIGHT HAND DRIVE

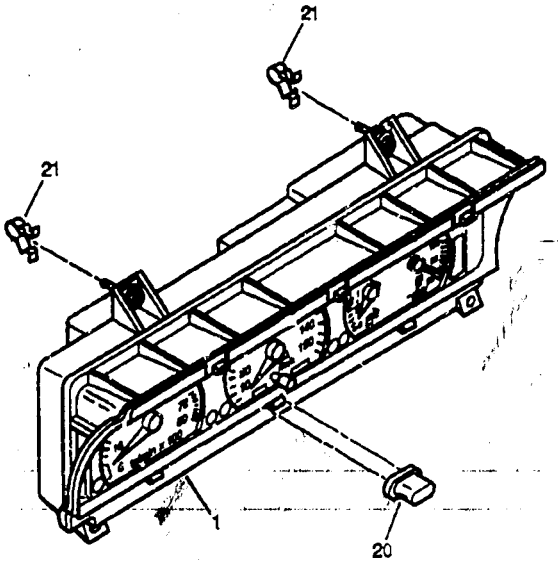

09/96 M5206230

M5209230

			INSTRUM CLUSTER
1	**6101 S6**	01	-PETROL, BVM, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 S7	01	-PETROL, BVA, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 R6	01	-PETROL, BVM, REV COUNTER CALC, STD OIL LEVEL INDICATOR
	6101 R7	01	-PETROL, BVA, STD OIL LEVEL INDICATOR, REV COUNTER CALC, GRADUATION MPH
	6101 R5	01	-PETROL, GRADUATION KMS/H EXCEPT INJECTION ES9J4
	6101 Z2	01	-INJECTION ES9J4, GRADUATION KMS/H
	6101 T0	01	-DIESEL FUEL, BVM, REV COUNTER CALC, STD OIL LEVEL INDICATOR
	6101 T1	01	-DIESEL FUEL, BVA, REV COUNTER CALC, STD OIL LEVEL INDICATOR
	6101 T7	01	-DIESEL FUEL, BVM, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 T9	01	-DIESEL FUEL, BVA, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
20	**95 499 232**	06	**FIXING STOP**
21	**96 171 714**	02	**CLIP** H 17 L18X6

31/08/2001

INSTRUMENT CLUSTER ASSY

- FROM O 07329
- WITHOUT MULTIPLEXING, RANGE INFO INDICATOR, LEFT HAND DRIVE

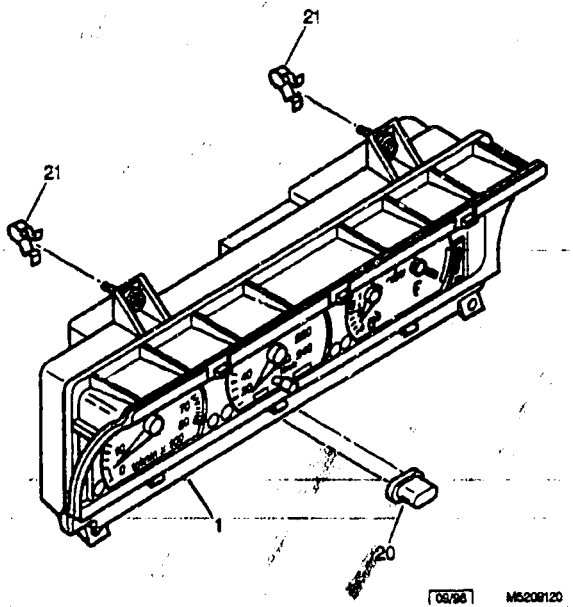

M5209120

			INSTRUM CLUSTER
1	6101 S0	01	-PETROL, BVM, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z3	01	-INJECTION ES9J4, BVM, OIL TEMP + LEVEL INDICATOR
	6101 S1	01	-PETROL, B'/A 4HP18, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z4	01	-INJECTION ES9J4, HP20 (AG), OIL TEMP + LEVEL INDICATOR
	6101 R6	01	-PETROL, BVM, WITHOUT OIL LEVEL GAUGE
	6101 R9	01	-PETROL, BVA, WITHOUT OIL LEVEL GAUGE
	6101 T2	01	-DIESEL FUEL, BVM
	6101 T3	01	-DIESEL FUEL, BVA
20	95 499 232	06	FIXING STOP
21	96 171 714	02	CLIP H 17 L19X8

31/08/2001

INSTRUMENT CLUSTER ASSY

- FROM O 07329
- WITHOUT MULTIPLEXING, NEEDLE TYPE FUEL GAUGE, LEFT HAND DRIVE

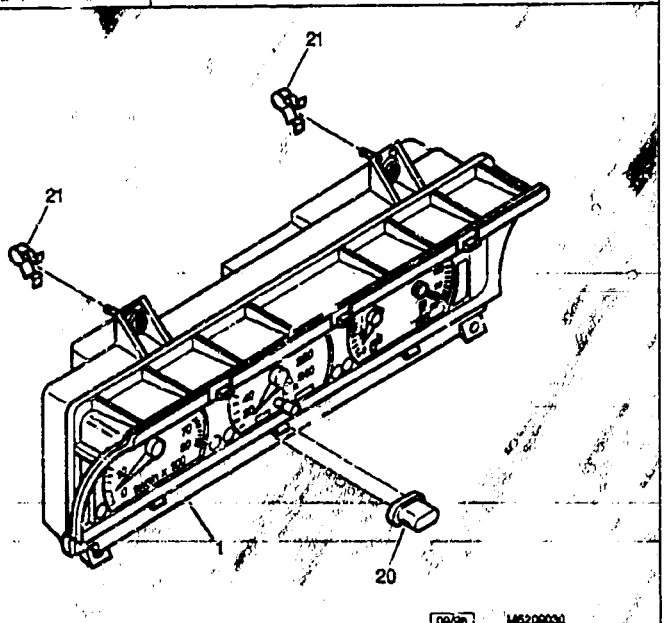

M5209030

				INSTRUM CLUSTER
1	6101 S4	01		-PETROL, BVM REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 S5	01		-PETROL, BVA, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 R4	01		-PETROL, BVM, REV COUNTER CALC, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z1	01		-INJECTION ES9J4 BVM, REV COUNTER CALC, OIL TEMP + LEVEL INDICATOR
	6101 R5	01		-PETROL, BVA 4HP18, REV COUNTER CALC, STD OIL LEVEL INDICATOR EXCEPT INJECTION ES9J4
	6101 Z2	01		-INJECTION ES9J4, HP20 (AG), REV COUNTER CALC, OIL TEMP + LEVEL INDICATOR
	6101 T6	01		-DIESEL FUEL, BVM, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 T8	01		-DIESEL FUEL, BVA, REV COUNTER CALC, WITHOUT OIL LEVEL GAUGE
	6101 S8	01		-DIESEL FUEL, BVM, REV COUNTER CALC, STD OIL LEVEL INDICATOR
	6101 S9	01		-DIESEL FUEL, BVA, REV COUNTER CALC, STD OIL LEVEL INDICATOR
20	9[illegible] 199 232	08		**FIXING STOP**
21	98 71 714	02		**CLIP** H 17 L19X6

31/08/2001

INSTRUMENT CLUSTER ASSY

- WITHOUT MULTIPLEXING
- TO O 07328

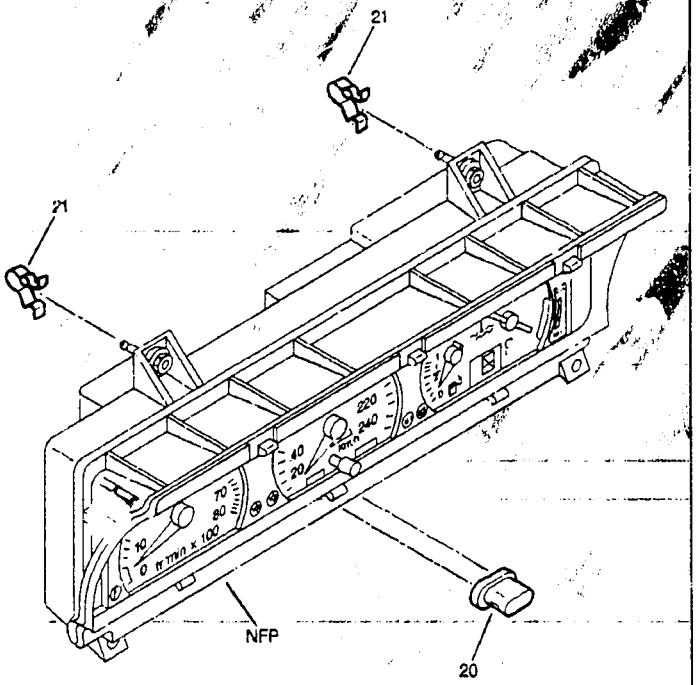

07/1999 M5209010

M5209010

20		95 499 232	06	FIXING STOP
21		96 171 714	02	CLIP H 17 L19X8